



USER'S MANUAL Part 2

Design Line Telephone 145




For Customer Service Or Product
Information, Visit Our Website At
www.telephones.att.com

Please also read
**Part 1 — Important
Product Information**

AT&T and the globe symbol are registered trademarks of AT&T Corp.
licensed to Advanced American Telephones.

© 2000 Advanced American Telephones. All rights reserved.
Printed in China. 850003054 Issue 1AT&T 6/00

INSTALLATION

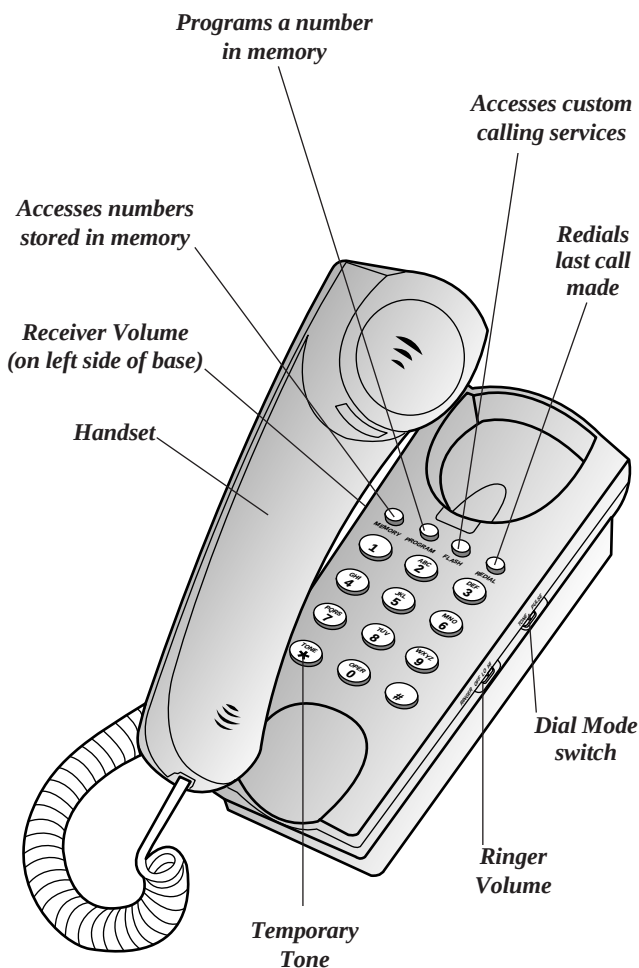

Dial Mode

This telephone has a selectable push-button dial and will work with either tone or rotary telephone service. It can be set to work directly with long-distance or certain other services that require tone signaling including some tone activated computer systems.

INSTALLATION

TABLE/DESK INSTALLATION

This telephone includes a 7-foot line cord with a modular plug on each end. You'll use this cord to connect the telephone to a modular jack.

1. Connect line cord to telephone

Plug the long line cord into the jack on the underside of the telephone base. Then feed the line cord through the channel provided so the telephone sits flat on your table or desk during use.

2. Set Dial Mode switch

This product comes set in the TONE mode. Make sure you choose the correct dialing method (TONE/PULSE); touch tone dialing will not work if you have dial pulse service.

3. Connect handset to base

Plug one end of the coiled cord into the handset, and the other end into the telephone base. Then hang up.

4. Connect line cord to modular jack

Plug the free end of the line cord into a modular jack. Make sure it snaps firmly in place.

5. Check for dial tone

Lift the handset and listen for a dial tone. If you can't hear a dial tone, refer to "In Case of Difficulty" and try to correct the problem.

TO DISCONNECT the telephone, squeeze the clip on the modular plug and pull it out of the jack.

INSTALLATION

WALL INSTALLATION

1. Reverse the handset tab.

When mounting the telephone on a wall, you must reverse the handset tab. This tab holds the handset when you hang up. Hold down the switchhook, and slide the tab up and out of its slot (Figure 1). Turn the tab so that the end with the “hook” is up (Figure 2). Then insert the tab back into its slot (Figure 3).

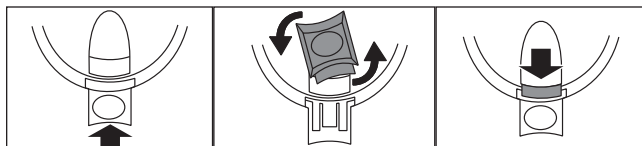


Figure 1

Figure 2

Figure 3

2. Fill in directory card

The enclosed directory card has an adhesive backing which lets you place it in a convenient location near the telephone. Write in your own telephone number and up to nine other numbers you want to remember on the directory card.

3. Plug the line cord into the jack on the underside of the base

Feed the short line cord into the channel. Feed the last portion (as short as possible), through one of the slots in the mounting area.

4. Install telephone base on wall jack

Hold the base up next to the wall jack and plug in the line cord. Then push the base against the wall jack and down until it is held securely by the mounting studs.

INSTALLATION

5. Set the Dial Mode switch

This product comes set in the TONE mode. Make sure you choose the correct dialing method (TONE/PULSE); touch tone dialing will not work if you have dial pulse service.

6. Connect handset to telephone base

Connect one end of the coiled handset cord to the base. Plug the other end into the handset. Then hang up the phone.

7. Check for dial tone

Lift the handset and listen for a dial tone. If you can't hear a dial tone, refer to "In Case of Difficulty" and try to correct the problem.

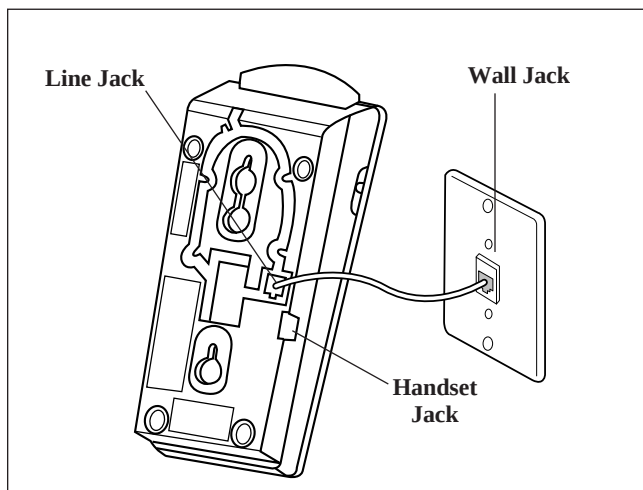


Figure 4

NOTE: If you cannot fit the base onto the wall jack plate, remove the top two non-slip feet.

OPERATION

Redial

The telephone always stores in memory the last number dialed. To dial the same number again, lift the handset, and press **REDIAL**.

The redial memory can accept numbers up to 32 digits long. The number will remain in memory until you change it by dialing another telephone number.

For privacy, you can erase the redial memory. Lift the handset, then press any digit (1-9).

Flash

Press **FLASH** instead of pressing the switchhook to activate customer calling services such as call waiting or three-way calling. You may have to press other buttons before or after **FLASH** as explained in custom calling instructions provided by your local telephone company.

Ringer Volume

The RINGER volume switch allows you to adjust the loudness of the telephone ringer from OFF to LO to HI. Slide the switch to the desired volume level.

Receiver (Handset) Volume

The Receiver volume switch on the left side of the base has three positions which allow you to adjust the loudness of your call from NORMAL to LOUD. Slide the switch to the desired volume level.

Temporary Tone

Temporary tone dialing is used only when you have rotary service. It allows you access to services that require tone signaling, including some tone-activated computer systems (e.g., telephone banking).

To change from pulse (rotary) to tone dialing during a call:

1. Dial a telephone number with the dial mode switch set to PULSE.
2. Press **★TONE**; all buttons pressed after this will send tone signals.
3. After you hang up, the phone automatically returns to rotary service.

MEMORY

Memory Features

Numbers will remain stored in memory unless you erase or change them by entering other numbers.

Capacity: This telephone can store up to nine different phone numbers, each up to 18 digits long.

Speed Dialing: Nine telephone numbers can be stored in standard speed-dialing locations. You can dial any of these numbers by pressing two buttons.

***NOTE:** Numbers programmed into a memory location might not be retained if the telephone has been unplugged from the line jack for a half hour or more.*

Speed Dialing

To program numbers into memory:

1. Press **PROGRAM**.
2. Enter telephone number. You will hear a click when each button is pressed.
3. Press **MEMORY**.
4. Enter a digit (1-9) for the memory location where the number is to be stored.
5. Hang up after the number is entered correctly.

Repeat steps 1-5 to store another number.

To dial:

1. Listen for dial tone.
2. Press **MEMORY**.
3. Press memory location (1-9).

Memory Erase

To erase any number from memory, you can enter another number in the same location.

— IN CASE OF DIFFICULTY—

If you have difficulty operating this phone, try the suggestions below.

No Dial Tone

- ☞ Make sure all plugs are connected properly. Inspect the line cord connections at the modular jack and at the telephone. Also inspect the coiled handset cord connections at both ends.
- ☞ Unplug the telephone and connect it to another modular jack. If it still does not work, try another telephone; if neither telephone works, the problem is not in this telephone. The trouble may be caused by local telephone company lines, central office equipment, or the wiring in your home.

Calls Cannot Be Dialed, or Are Dialed Slowly

Reset Dial Mode switch. If you have rotary service, you cannot dial numbers with the switch set to TONE. Set the switch to PULSE, then hang up and dial again.

If you have tone dialing service, you can use either tone or dial-pulse mode. If you set the switch to TONE, numbers are dialed much more quickly.

Telephone Does Not Ring

- ☞ Make sure the Ringer switch is not set to OFF.
- ☞ If there are several other phones on the same line, try disconnecting some of the other telephones. Having too many telephones can also create problems such as low ringer volume or impaired quality during calls.

Other Problems

For customer service, visit our website at www.telephones.att.com or call 1 800 222-3111.

Please retain your receipt as your proof of purchase.